


How to charge:

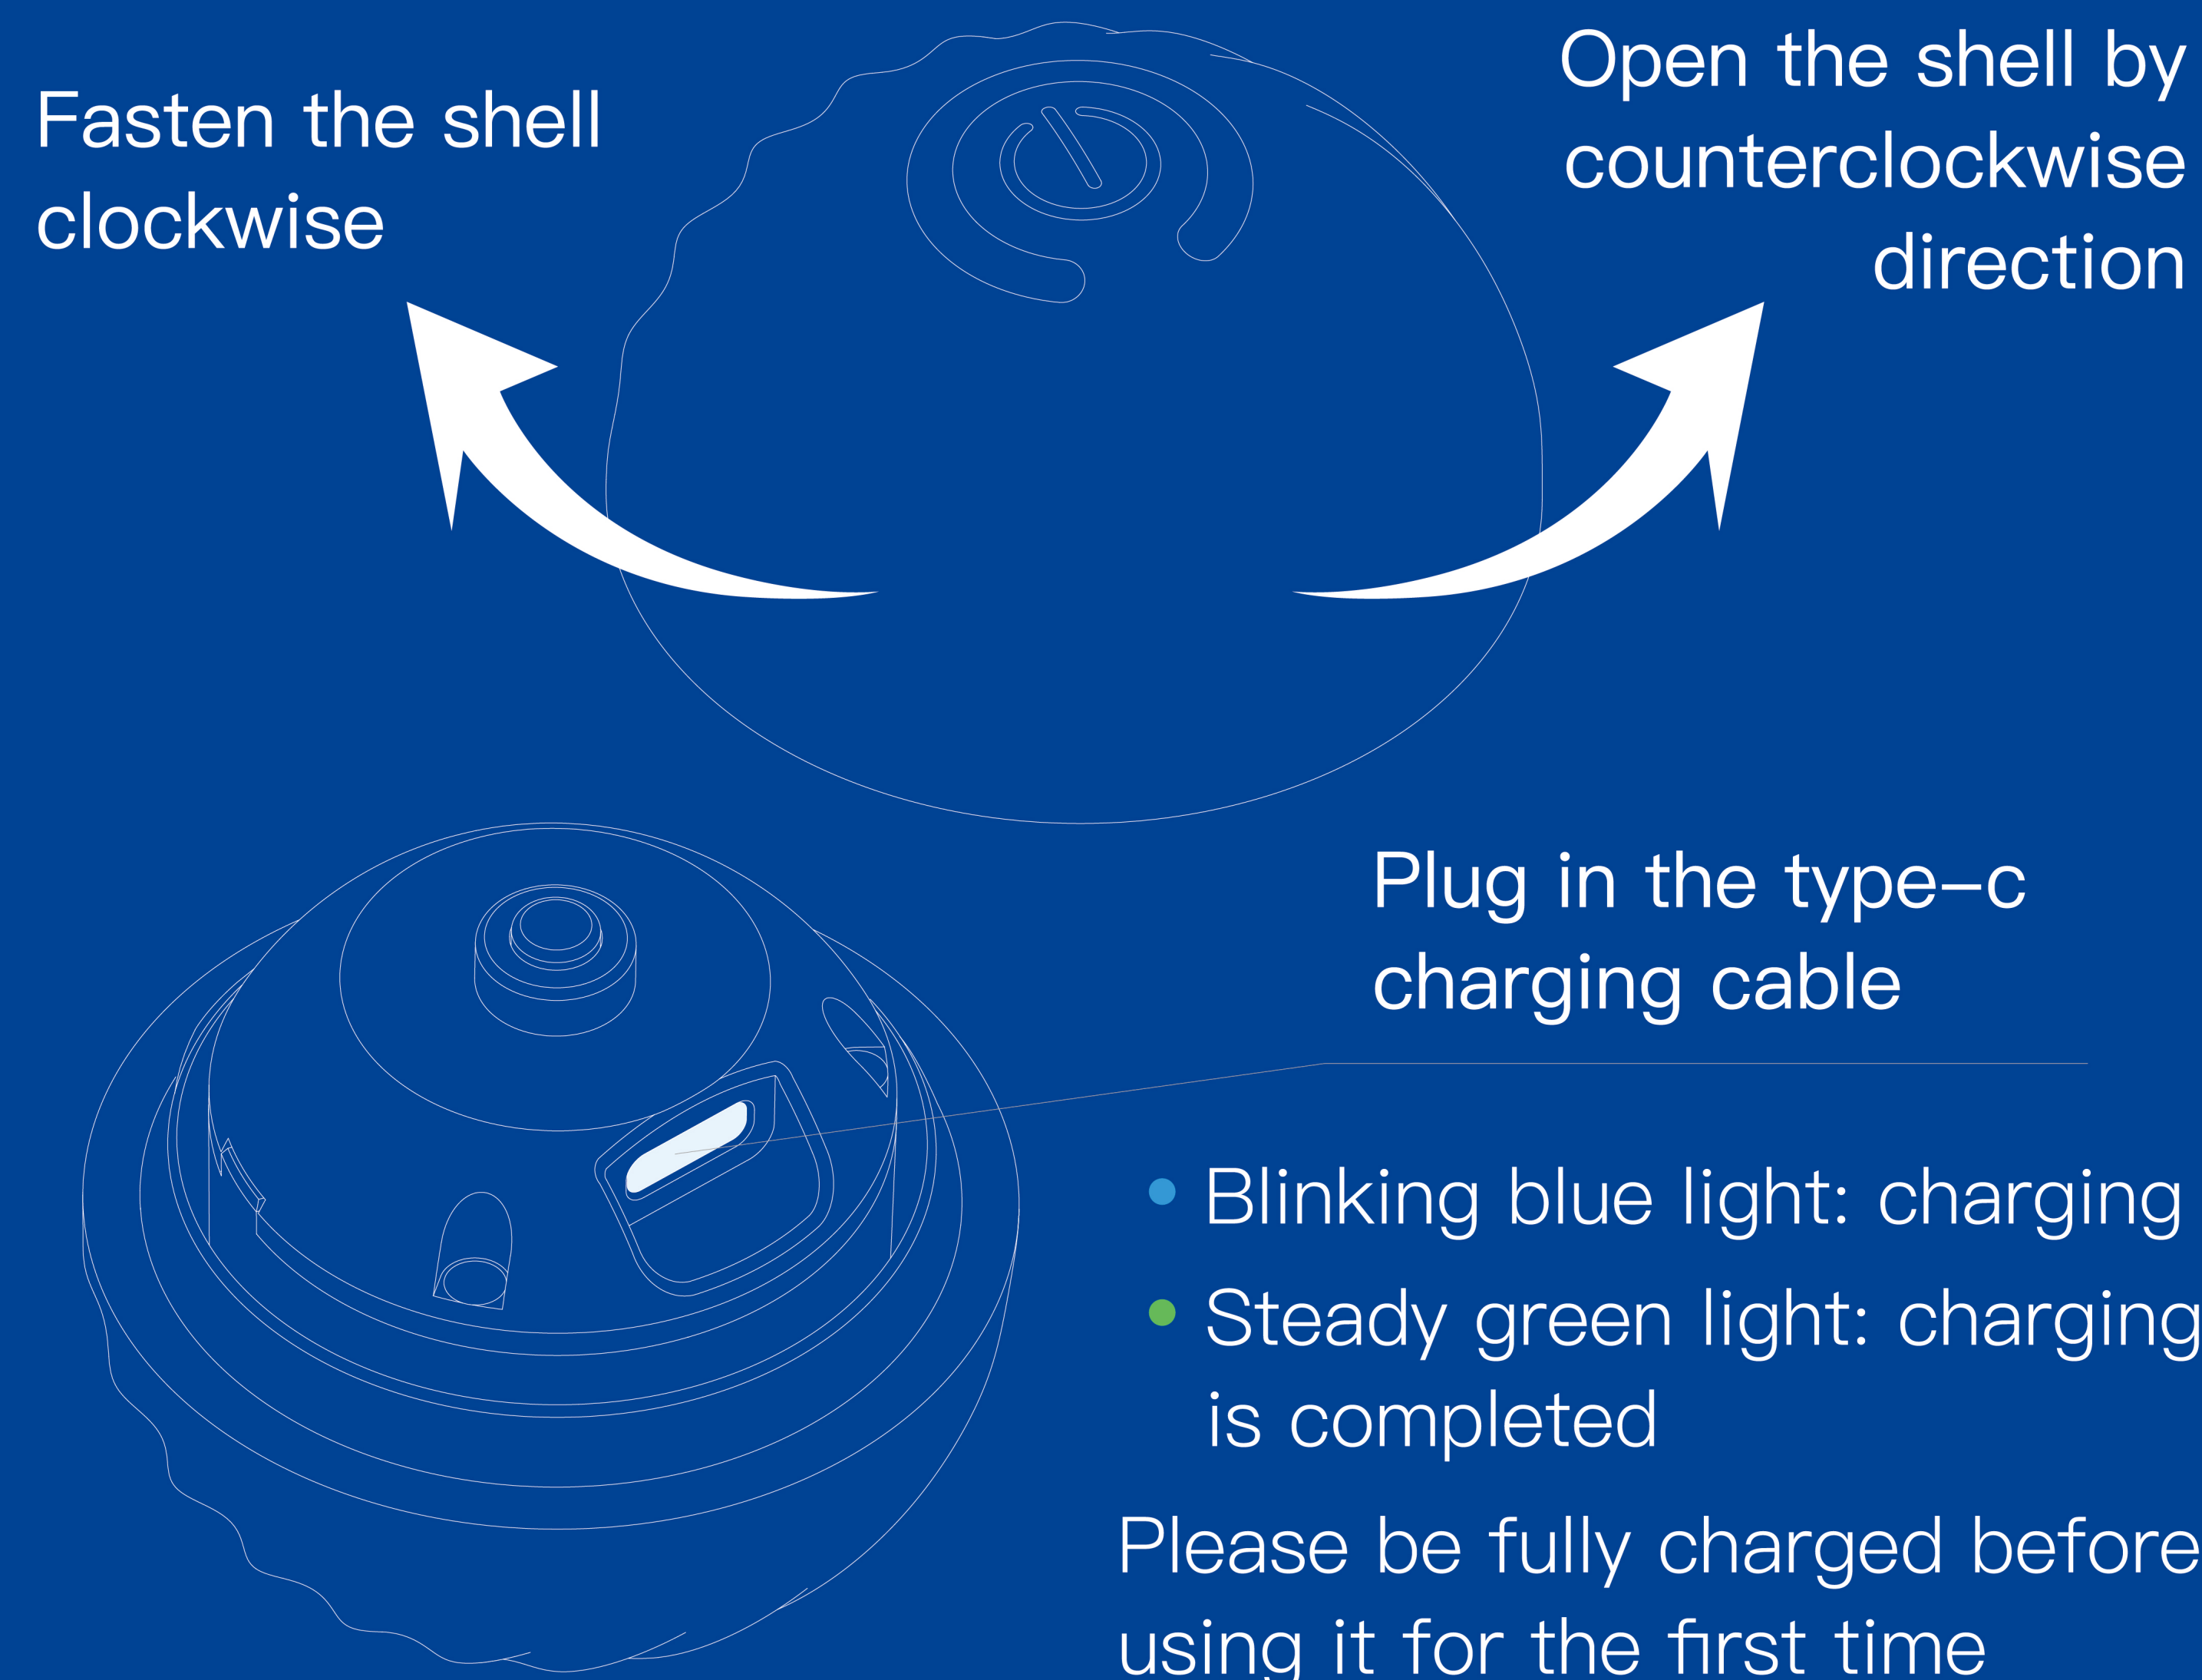

Note: If the shell is damaged, please replace it with a new one in time to avoid pets from swallowing the internal components.

Warning: This product is a pet toy, Not suitable for children under 3 years. Small parts. Choking hazard. Do not clean with water!

Use Instruction:


Short press the switch button: start/stop the bouncing ball

Switch mode: in the startup state, long press the switch

1. Normal mode (steady green light for 3s), automatic shutdown after 5 minutes of operation
2. Smart mode (steady blue light for 3s), automatically enter standby state after running for 5 minutes, reactivate after tapping

Indicator light:

- Blinking red light: low battery
- Blinking blue light: charging
- Steady green light: finished charging

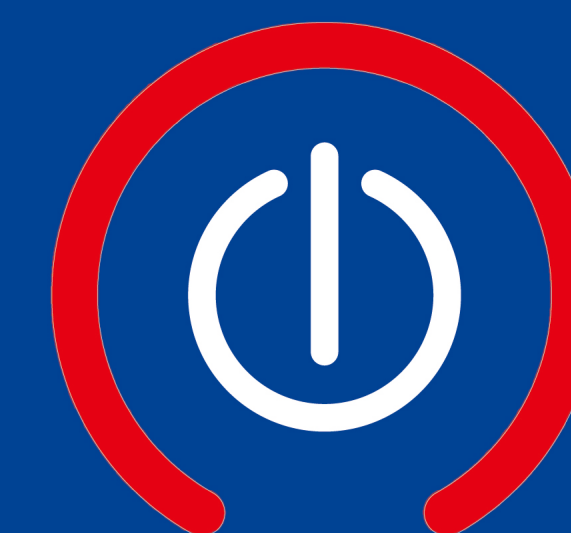

Battery charger used with the toy are to be regularly examined for damage to the cord plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

It as to be kept since it contains important information.